


MULTIPLEX PERFORATOR TAPE.

UPPERCASE -	?	:	;	'	"	&	£	¢	!	()	.	,	9	0	1	4	5	7	;	2	/	6	"	CAR. RET	LINE FEED	LTRS	FIGS	SPACE	DATA		
LOWER CASE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z					

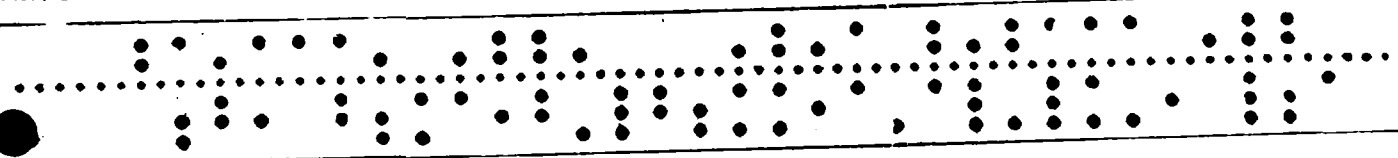

TO PUNCH UPPER CASE CHARACTERS (NUMBERS AND SYMBOLS) AFTER HAVING PUNCHED LOWER CASE CHARACTERS, FIRST OPERATE "FIGS" KEY

TO PUNCH LOWER CASE CHARACTERS (LETTERS) AFTER HAVING PUNCHED UPPER CASE CHARACTERS, FIRST OPERATE "LTRS" KEY.

TO RUB OUT AN ERROR IN PUNCHING, BACK SPACE AS FAR AS IS NECESSARY, AND THEN OPERATE THE "LTRS" KEY OVER THE CHARACTERS WHICH ARE TO BE RUBBED OUT, OPERATE SPACE KEY, AND THEN REPUNCH.

AT END OF LINE OPERATE CARRIAGE RETURN TWICE AND LINE FEED ONCE.